


NETBOOK PC

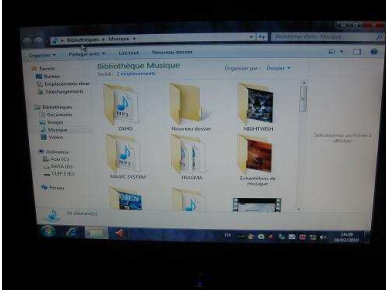

RS232 PORT OR USB TO RS232 CONVERTER

PPM INTERFACE


UNDERWATER

TETHER

PPM SIGNAL

PPM TO PWM INTERFACE

SERVO
SERVO
SERVO
SERVO
SERVO
SERVO
SERVO

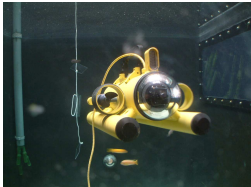

ROV